


BODAQ

single colour


NIEUW




S243

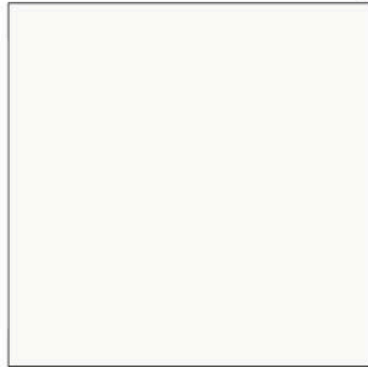


S115

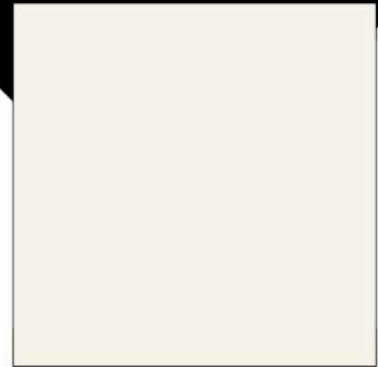


S176

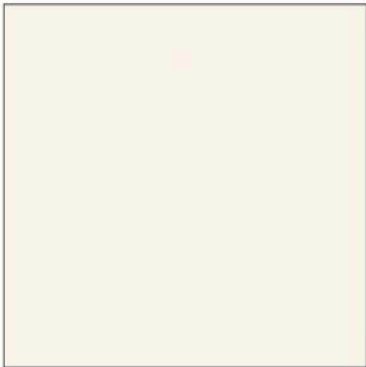


S178

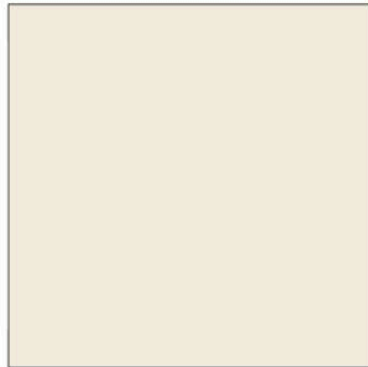

S208

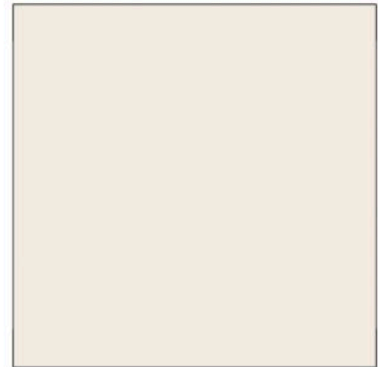


S126

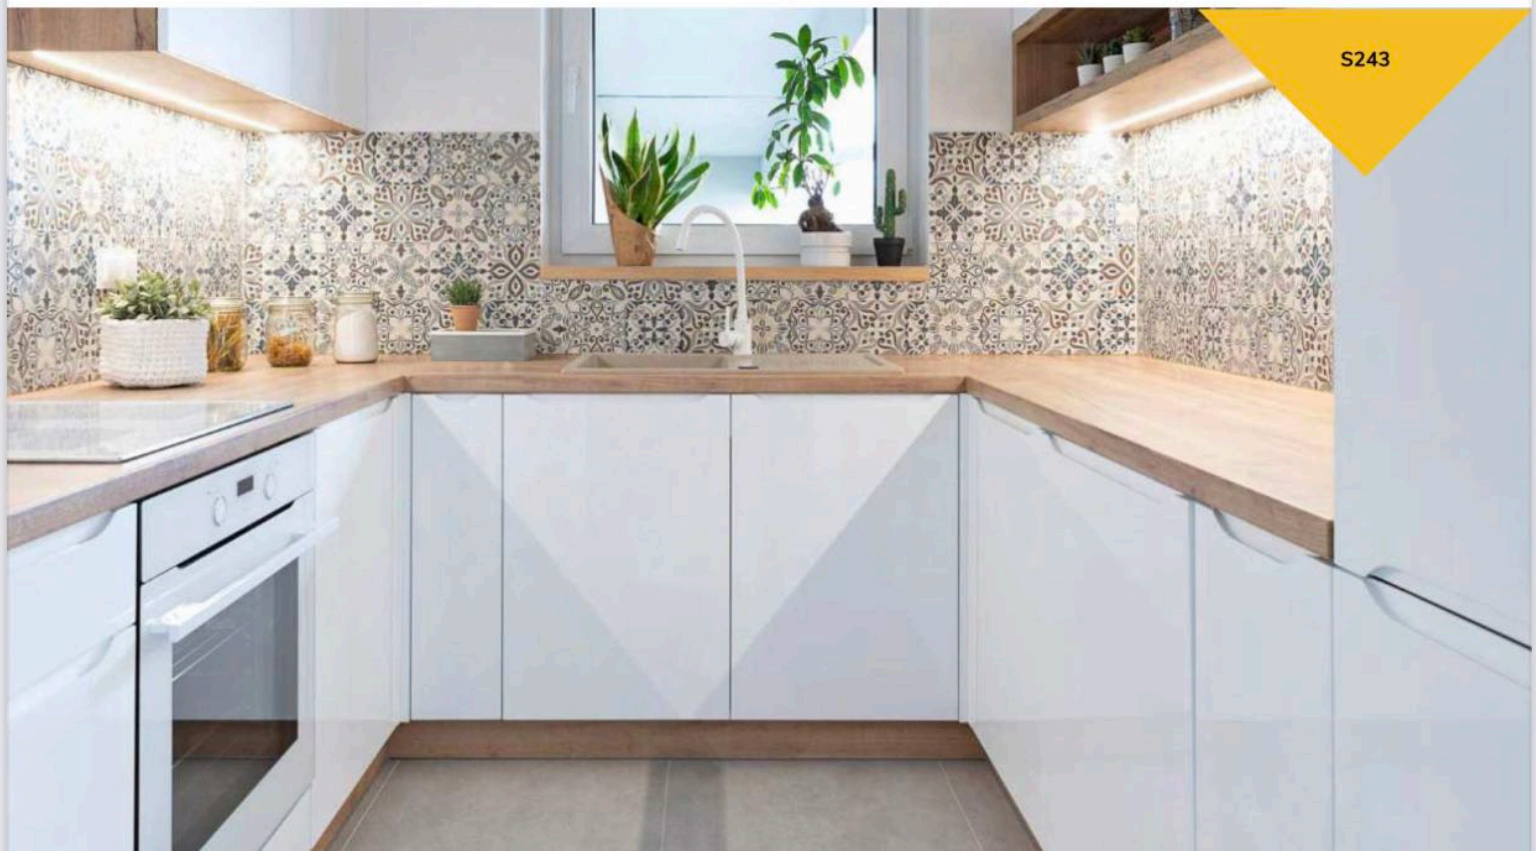

S243

BODAQ
single colour

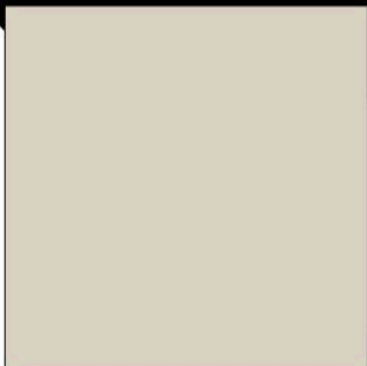

S179



S128



S177




S141



S127




S215

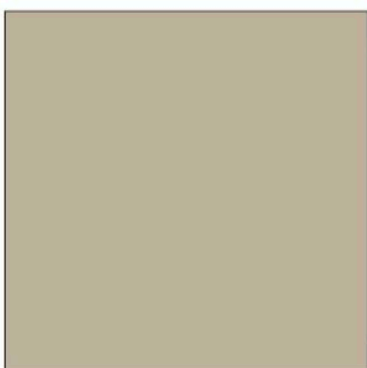


S156




S157

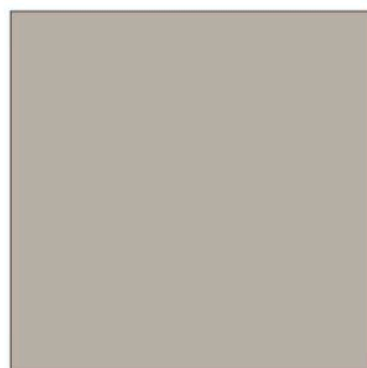


S181

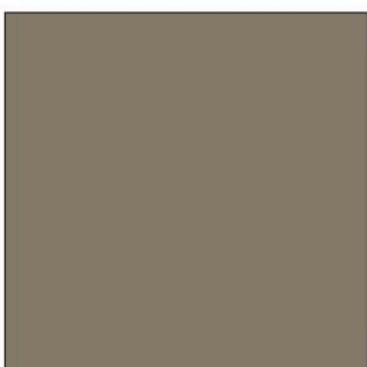

S183

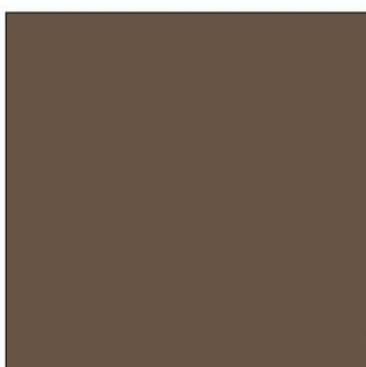

S145




S158

BODAQ
single colour




S143



S209



S235

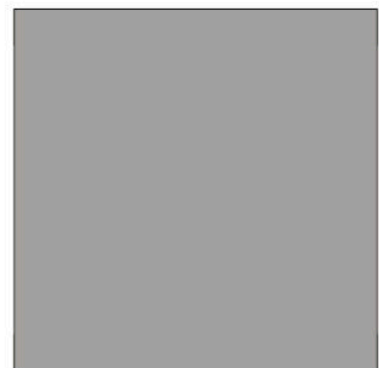

S143

BODAQ
single colour



S149



S198




S211



S140



S206

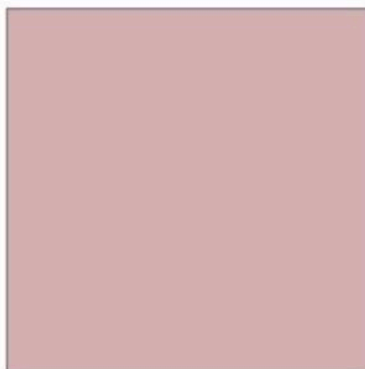


S207



S238



S217

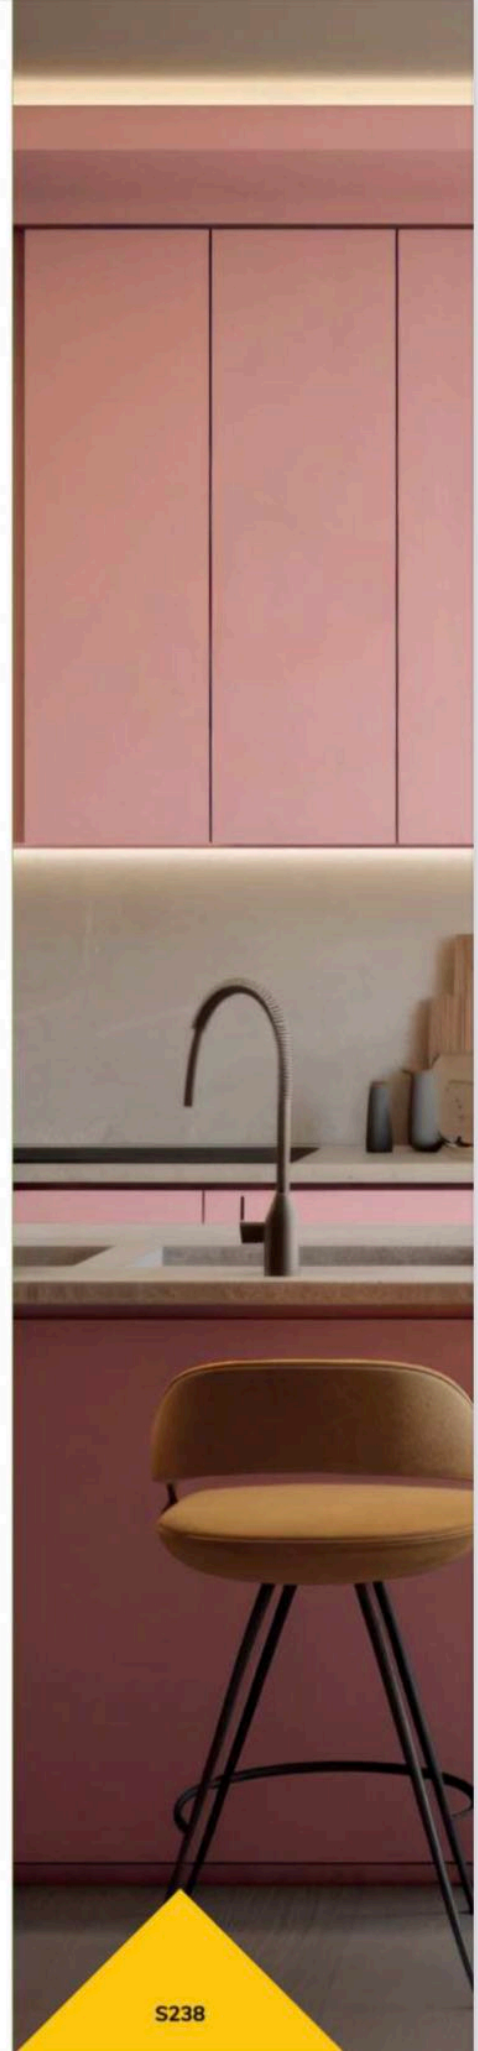


S238

BODAQ

single colour



NIEUW

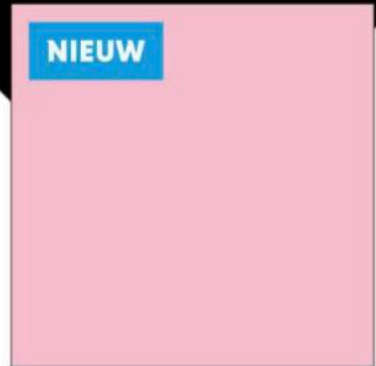

S232



S198

NIEUW




S242




S230

BODAQ

single colour

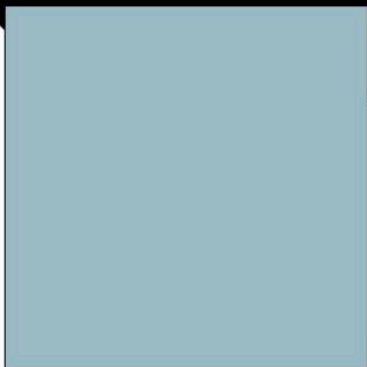


S195

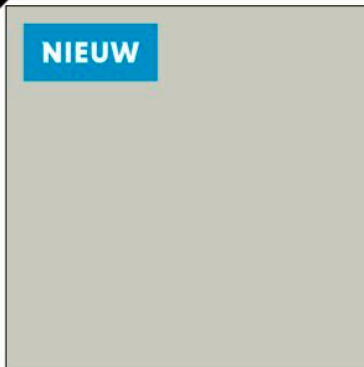


NIEUW


S239

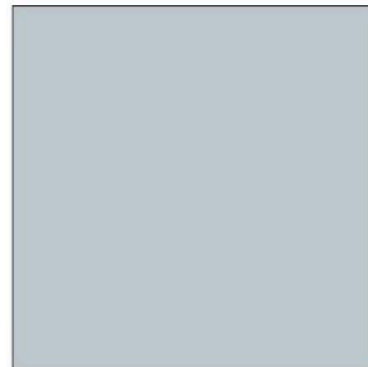


S153

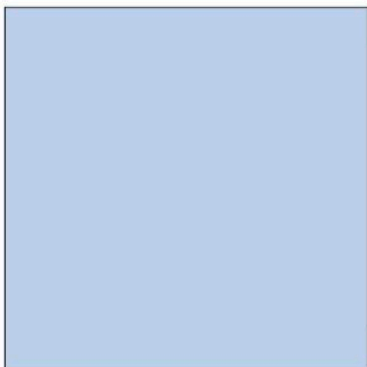


S185

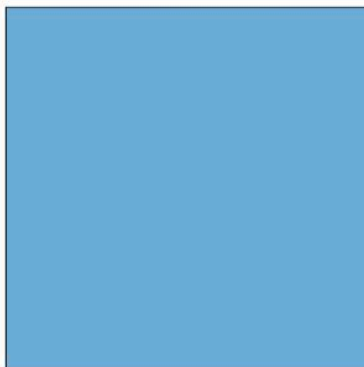

S186

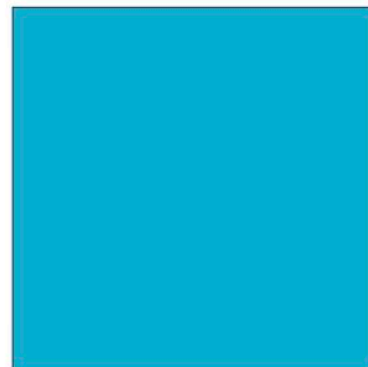

S175

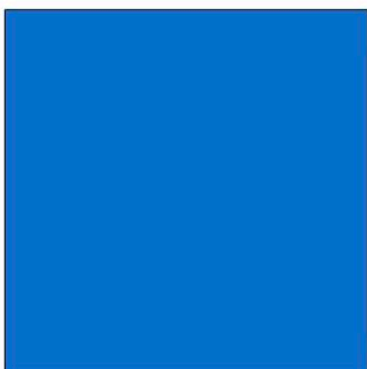

S173



S150



S204



S197



S233



S202

BODAQ
single colour




S201



S201



S200

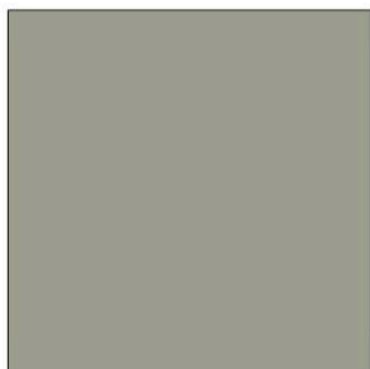


S212



S214




S189

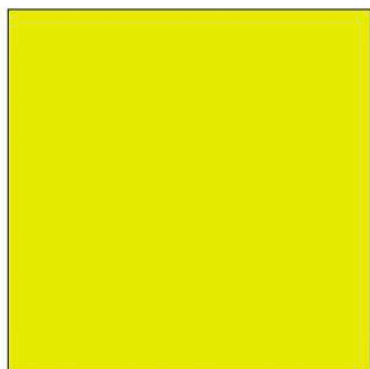

S166



S241

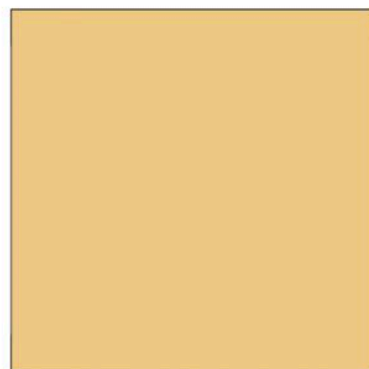

S194

S173



S197

S150



S233

S204



S202




BODAQ
single colour



S201



S200

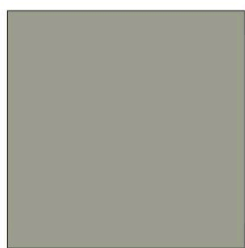


S212



S214




S189

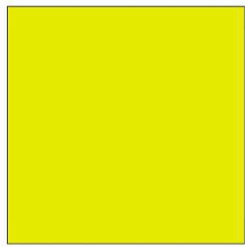

S166




S241

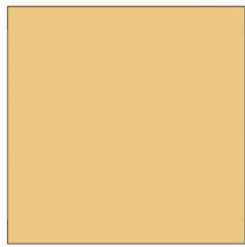


S194

BODAQ
single colour

BODAQ
single colour

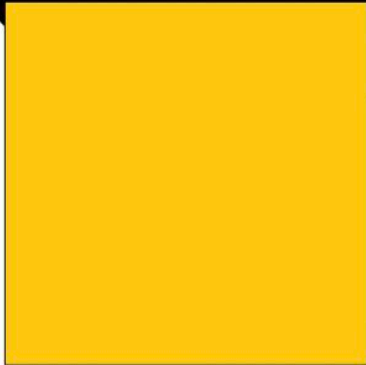


S188

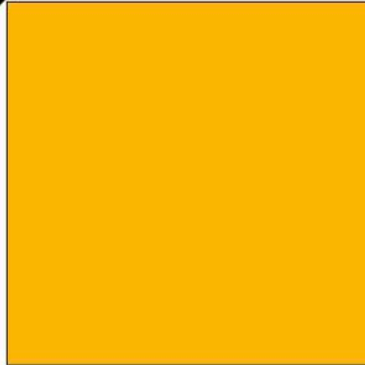

S146




S213

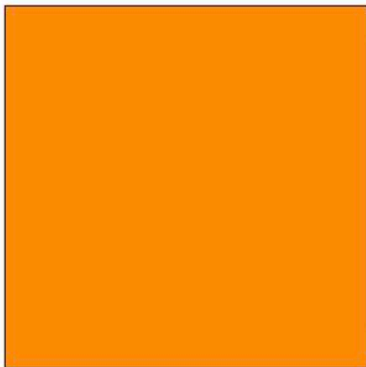


S169



S147

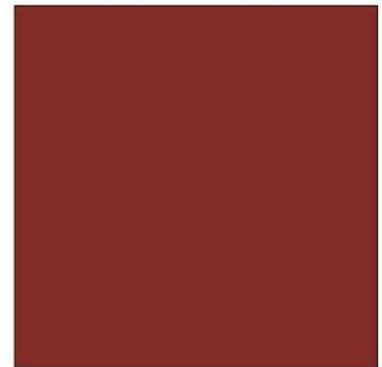

S218

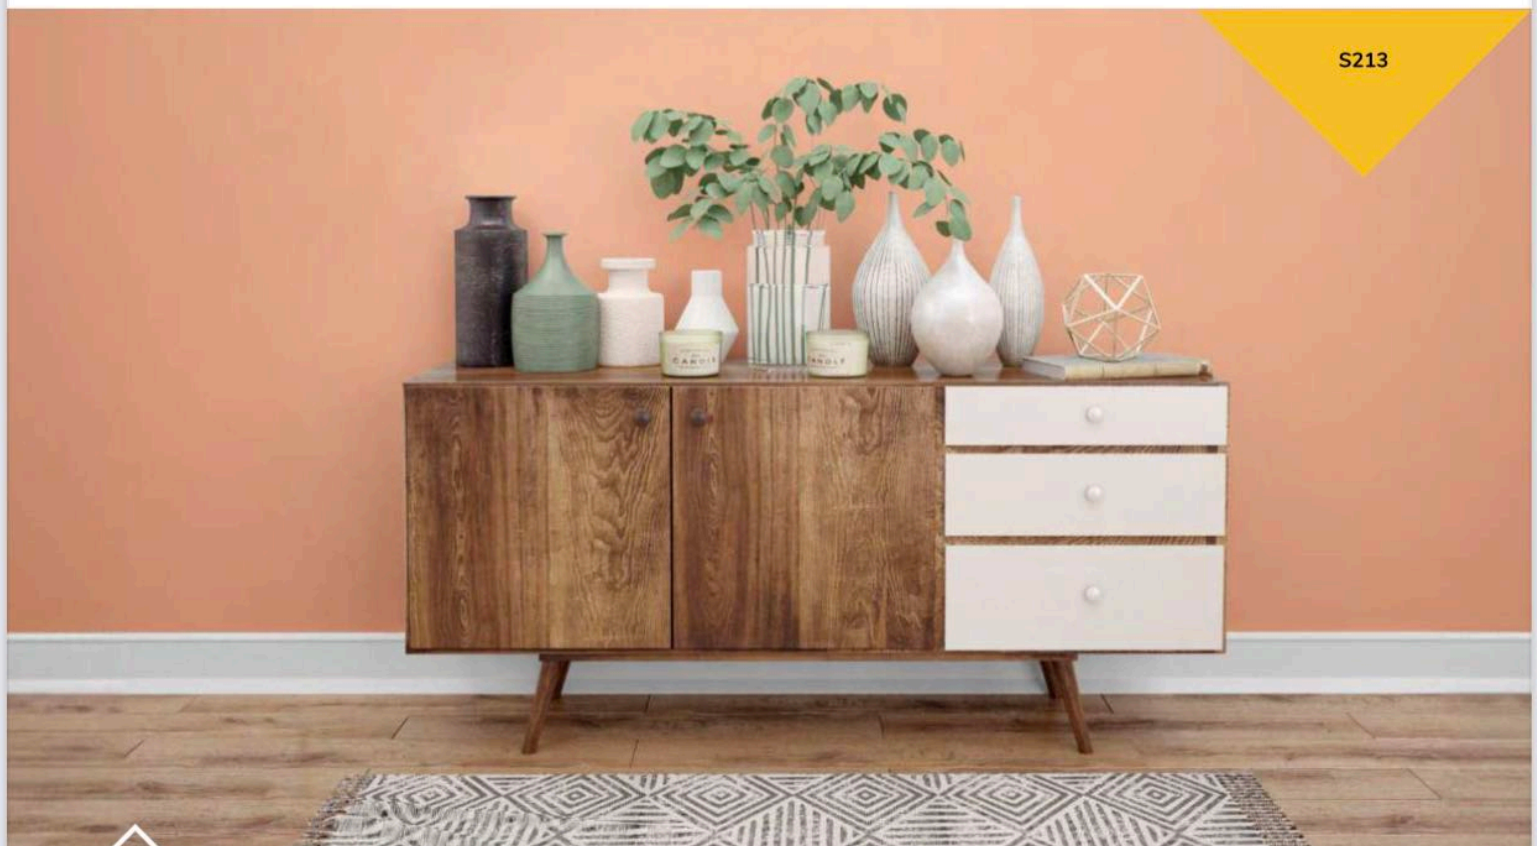


BODAQ

single colour




SMT05

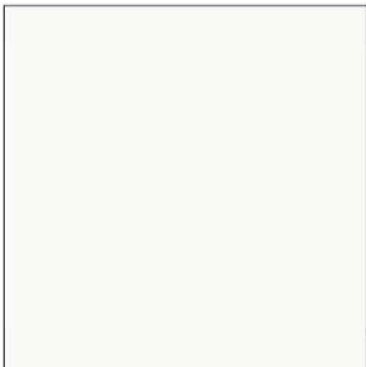


SMT01




SMT13

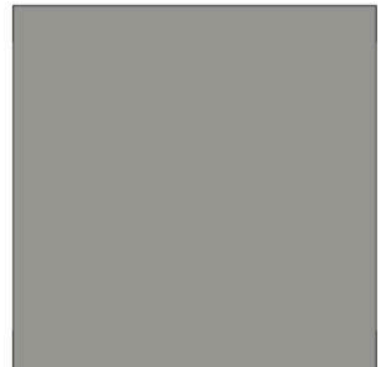

SMT05



SMT06



SMT07



SMT03

BODAQ

single colour




SMT04



SMT14



SMT15

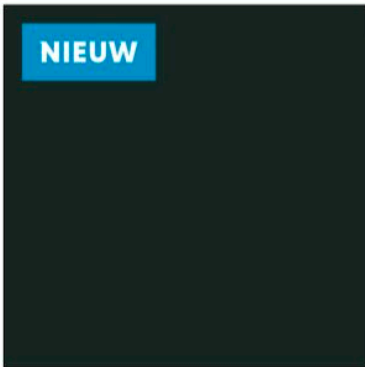

SMT10



SMT11




HS204



HS205


BODAQ texture

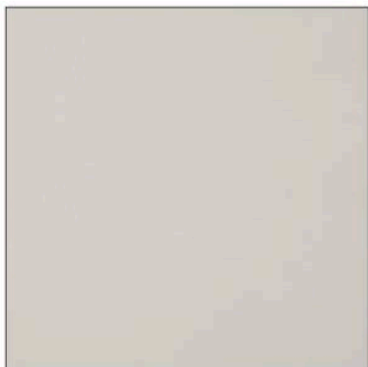


LM202



DM036

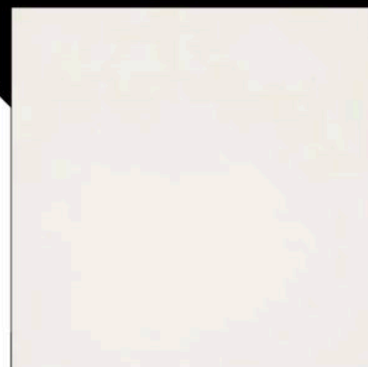


LS102

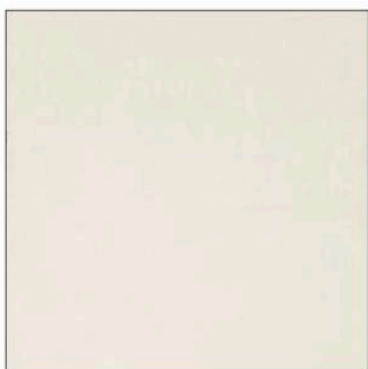


LS104



LS103

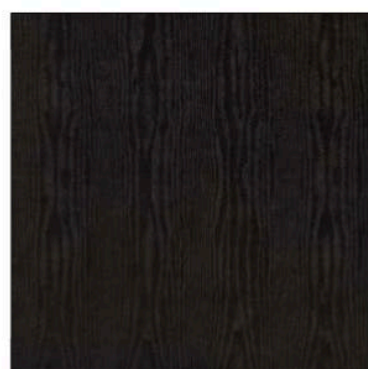


LS106

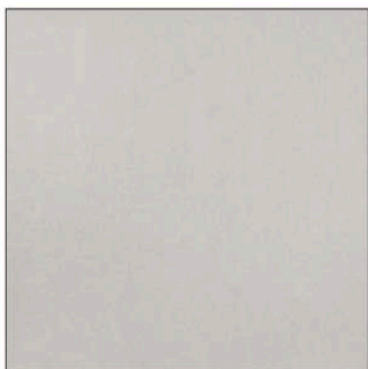

DM017



DM801

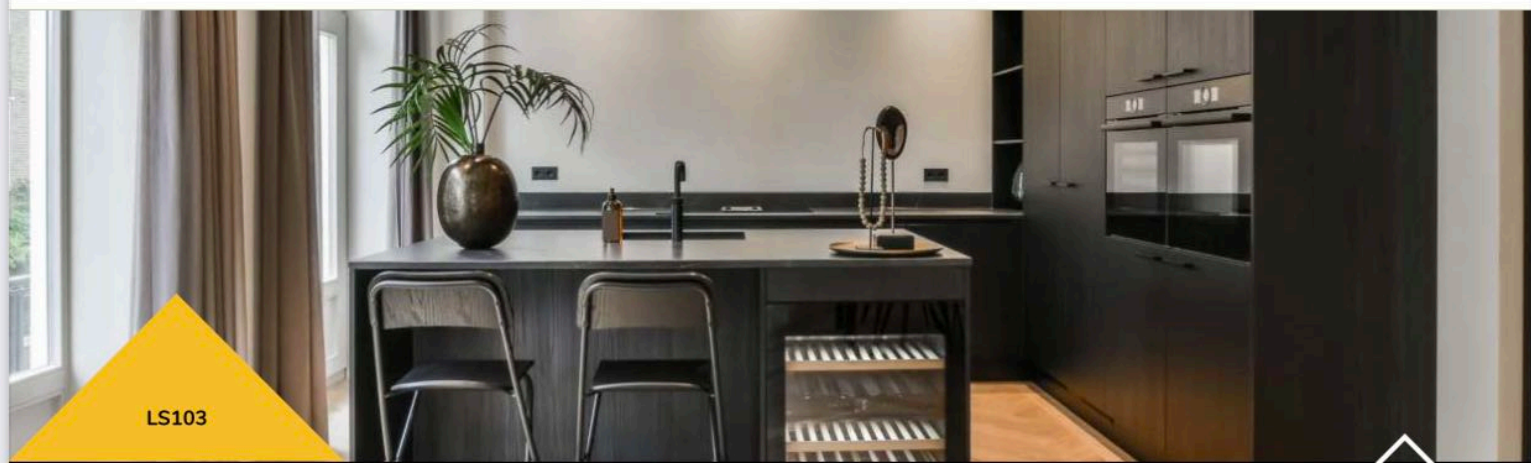

LS103

BODAQ
rich wood



BZ912



BZ884



BZ907




BZ910



HZ003



HZ005

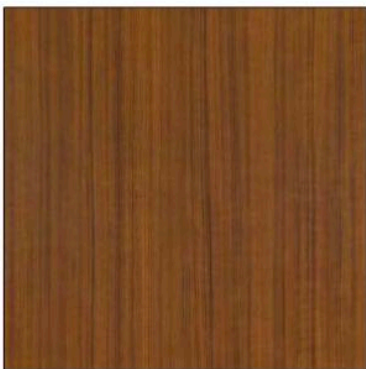


HZ004




HZ006




PZ913

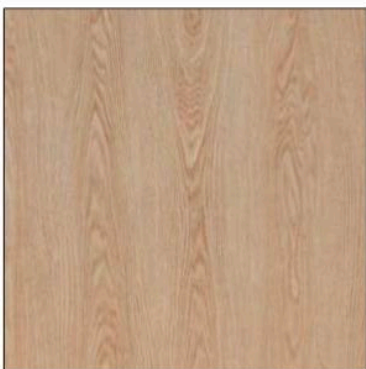

PZ610

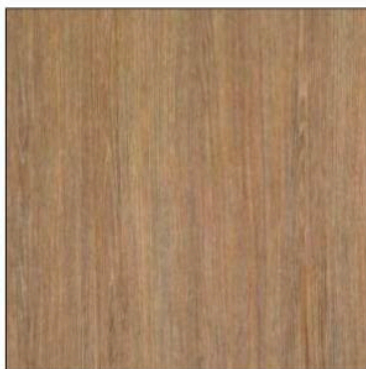

PZ904

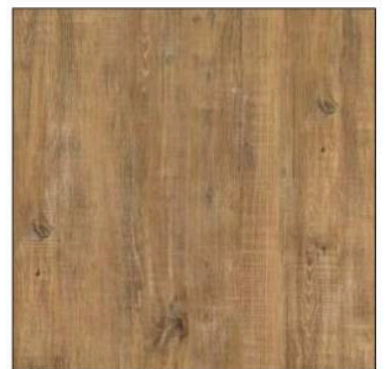

PZ806

BODAQ
rich wood



PZ807




PZ901



PZ614




PZ611

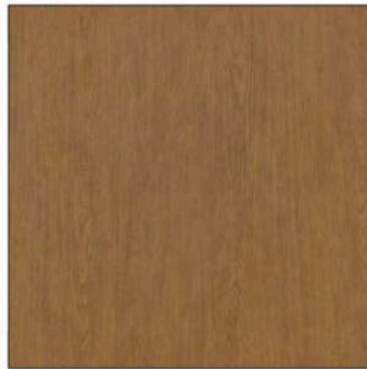


PZ008




PZ021

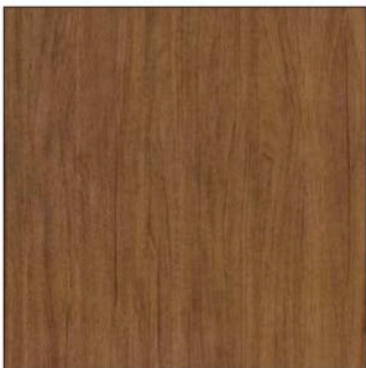


PZ616

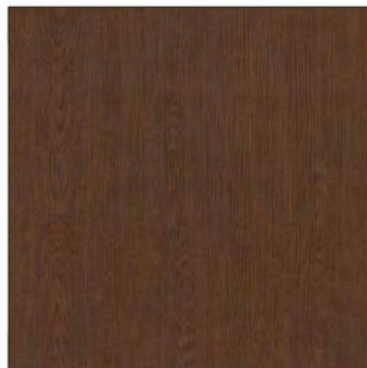


PZ020

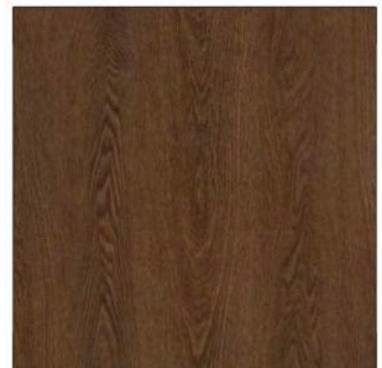


PZ612

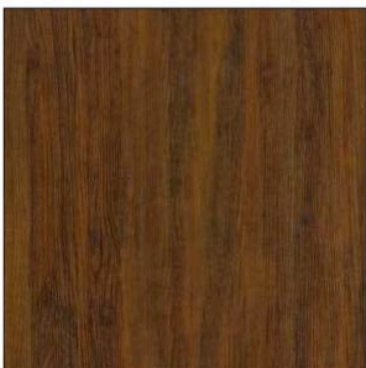

PZ013

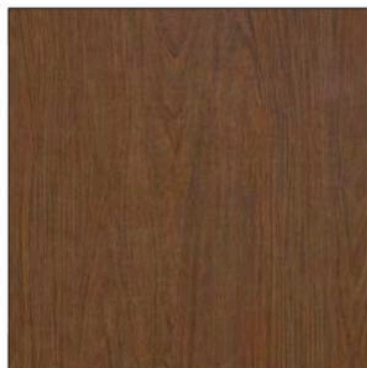

PZ022

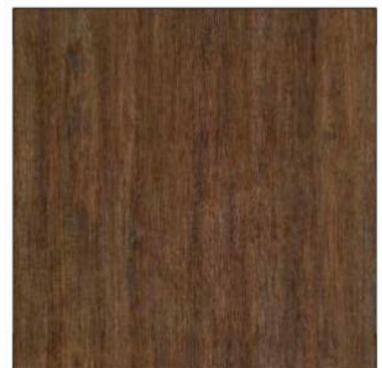

PZ912

BODAQ
rich wood



PZ906



PZ010



PZ613




Z860S



Z858S



Z848S

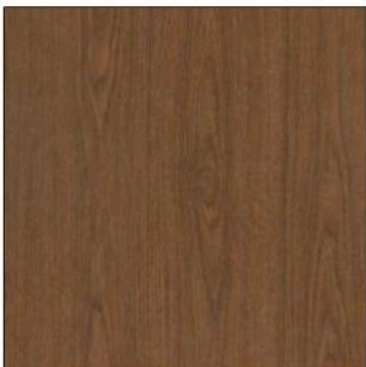

Z842S



Z836S



PZ010

BODAQ design wood


NIEUW



DW801



DW710

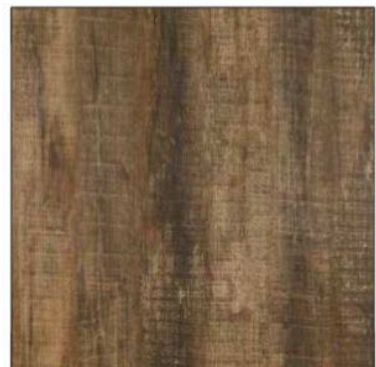

DW724




DWP33




DW710

BODAQ

standard wood

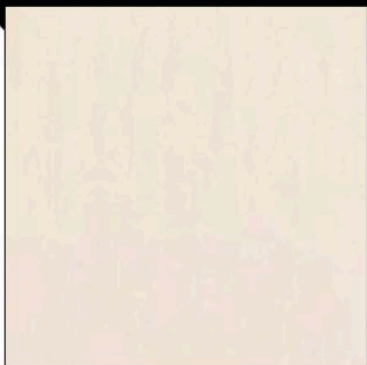

W198

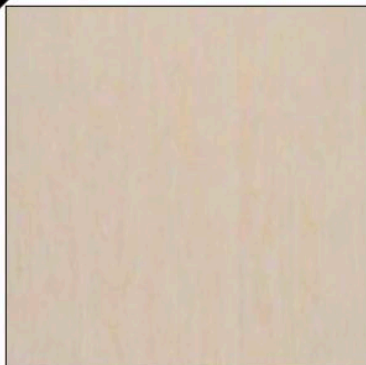

W199



W863




W938




W935



W871

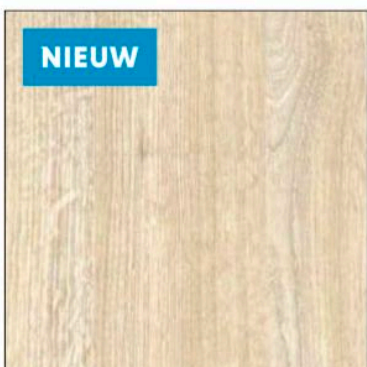

W865

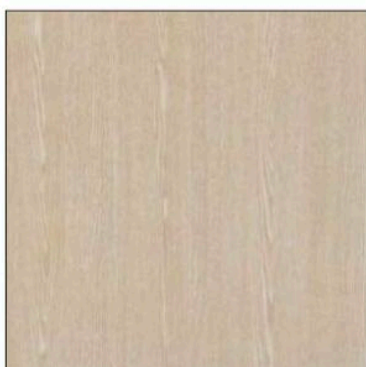


W932




W375



W948

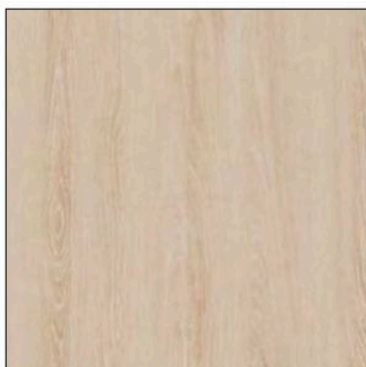

W944

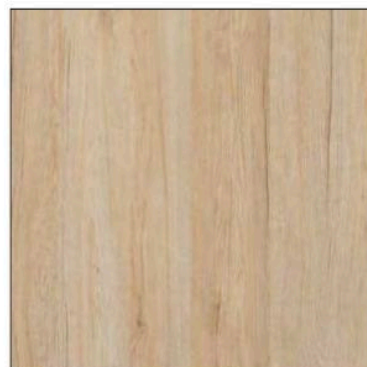

W945


BODAQ standard wood



W371



W195

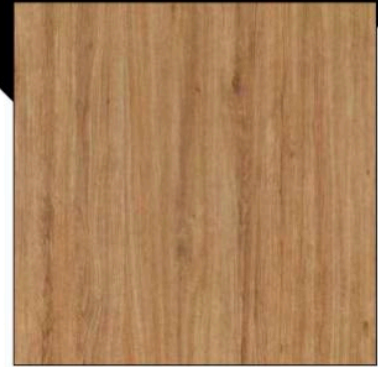


W949



W925




W358

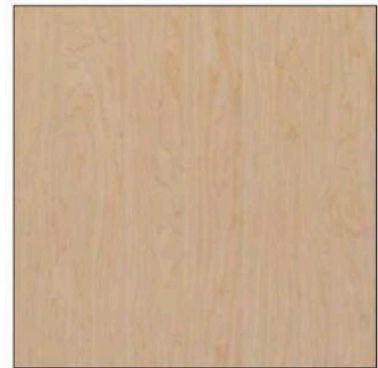


W200




W401

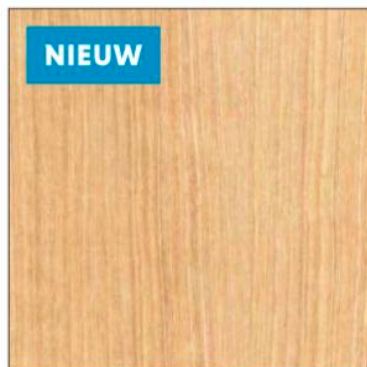


W504

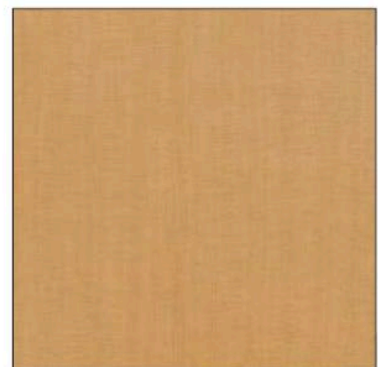


W845

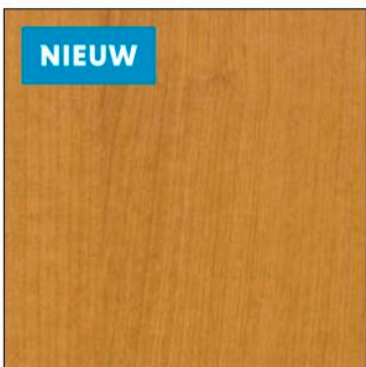

W636

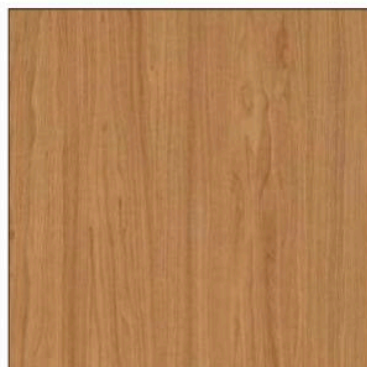

W849

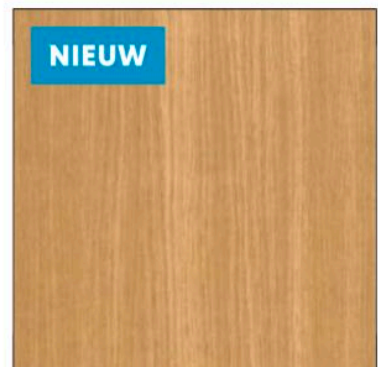

W864

BODAQ

standard wood




W870



W251




W141

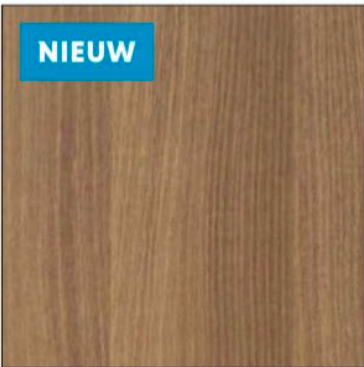


W923




W376

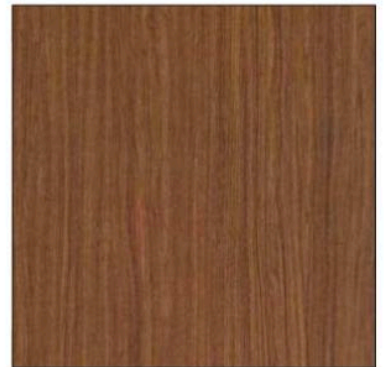


W302

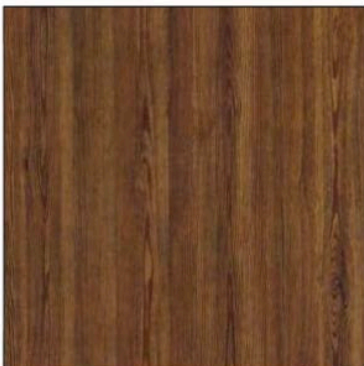


W205

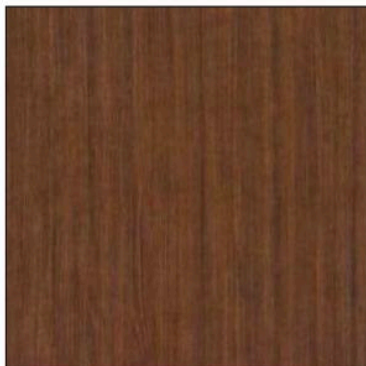

W931

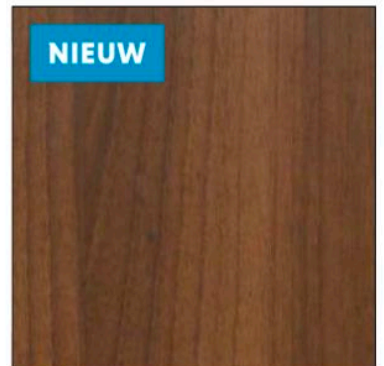


W816

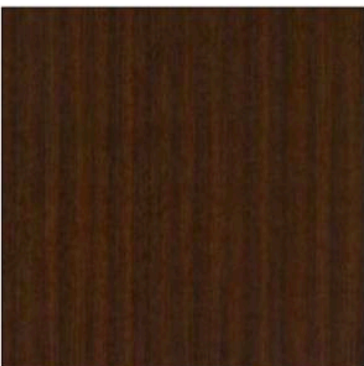

W207




W722

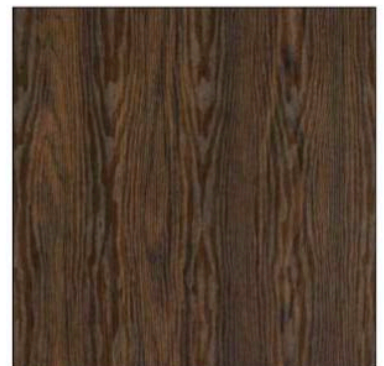


W823

BODAQ
standard wood

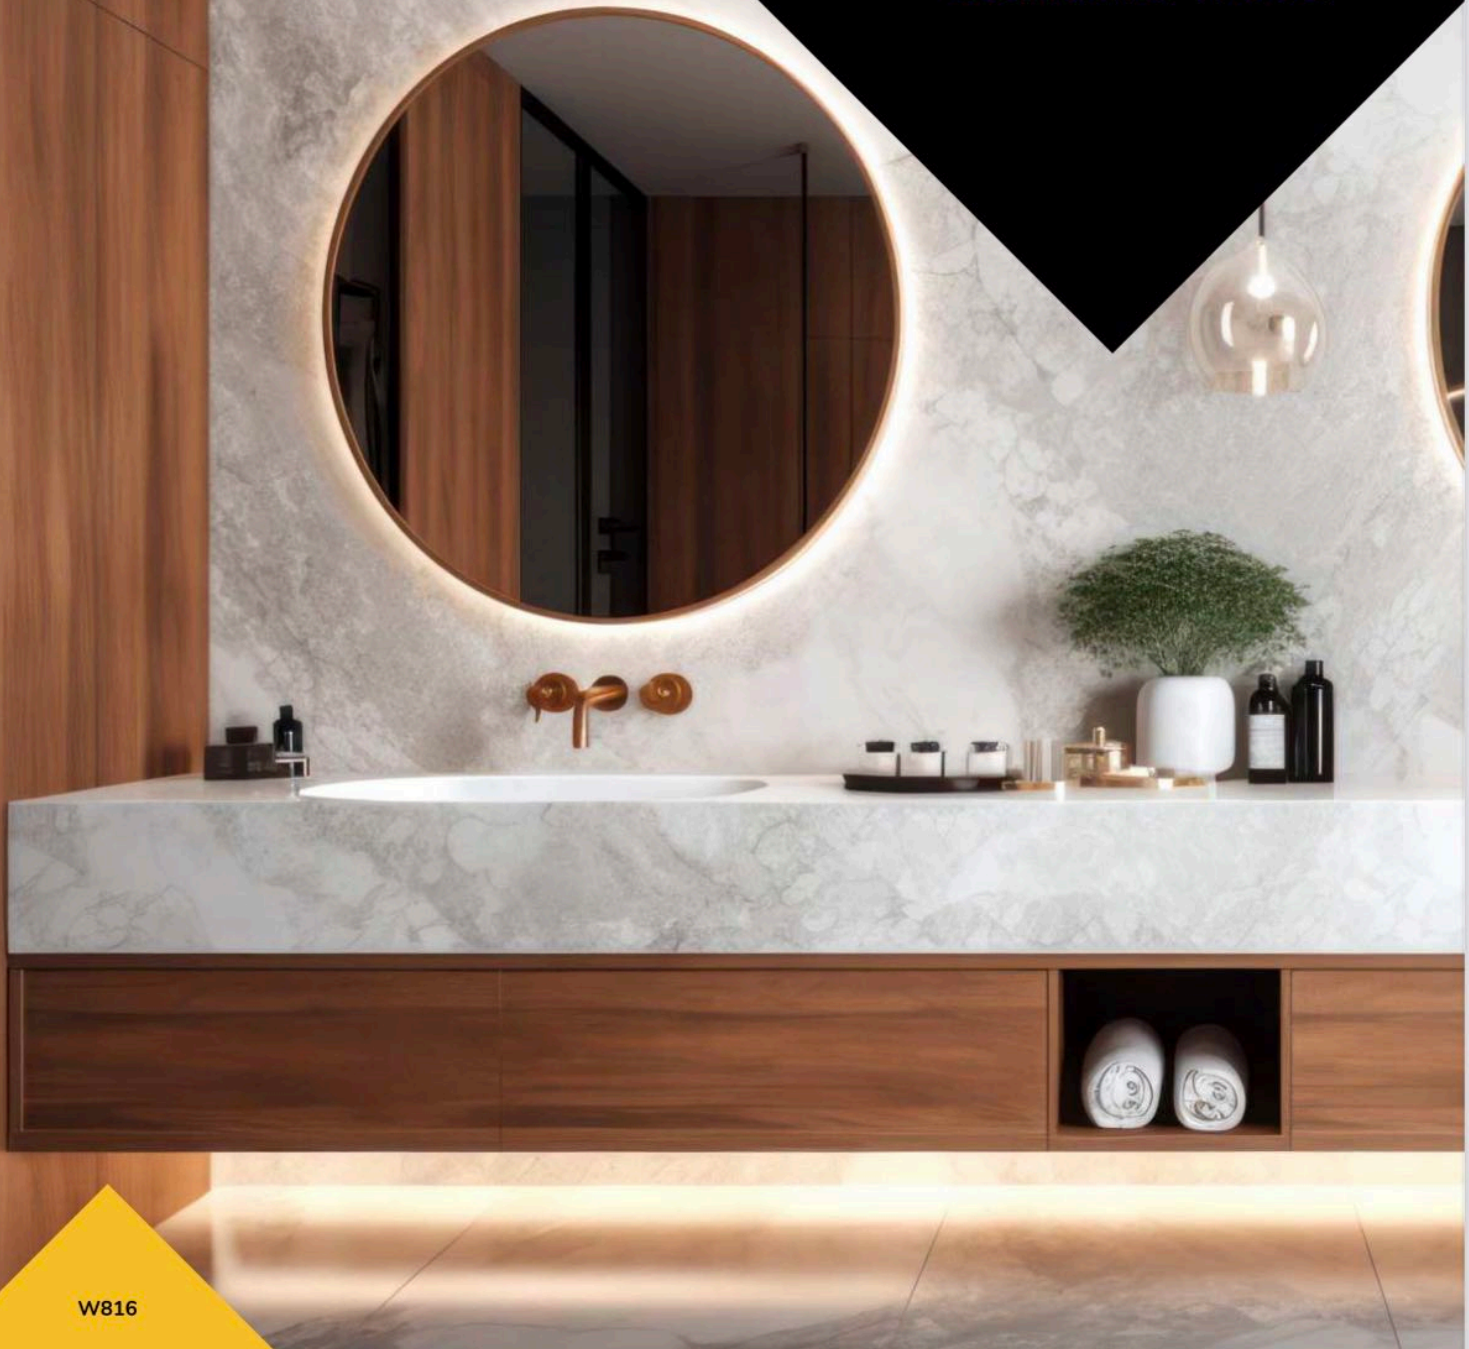

W816

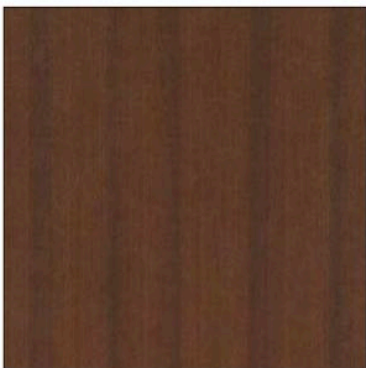

W638



W731




W705

BODAQ
standard wood



W508

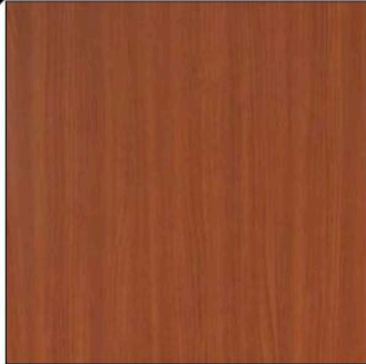


W171



W276



W671

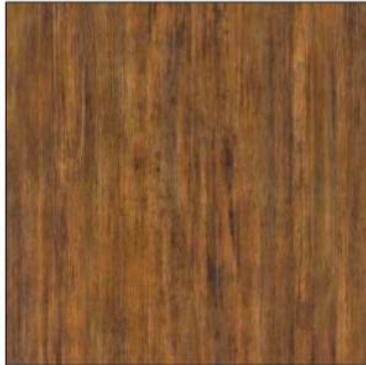

W274



W278


BODAQ
origin wood



SPW13



SPW15

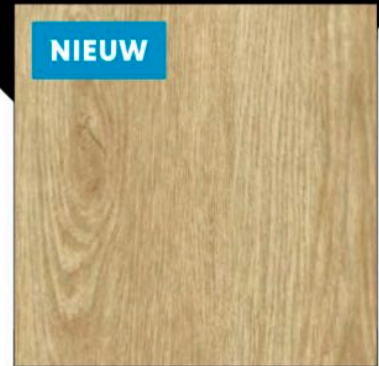


SPW17



SPW16




SPW18

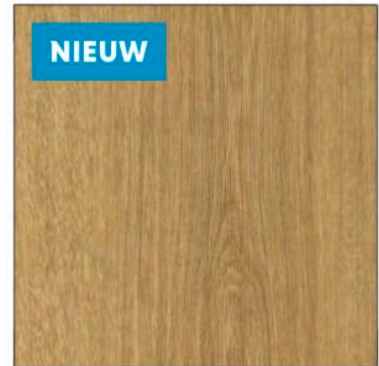

SPW96




SPW12

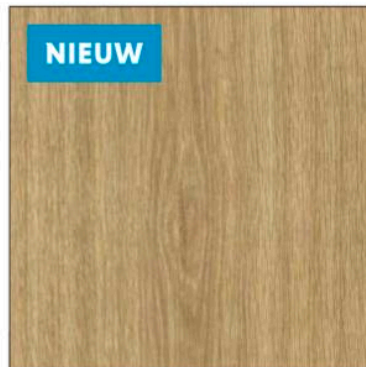


SPW95



SPW94

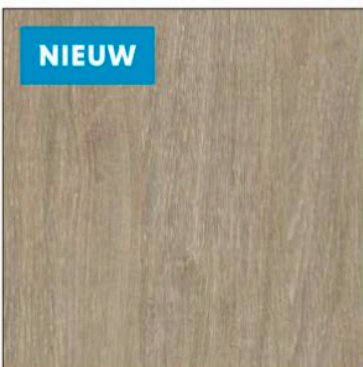


SPW93

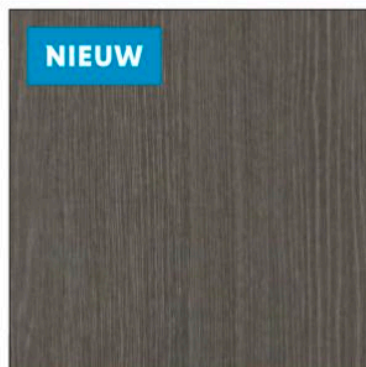


SPW92

BODAQ premium wood

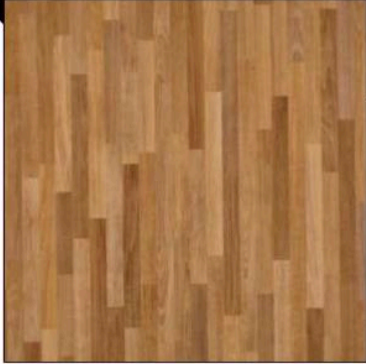


XP113

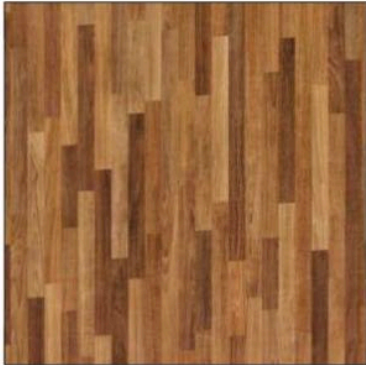


XP114




XP118

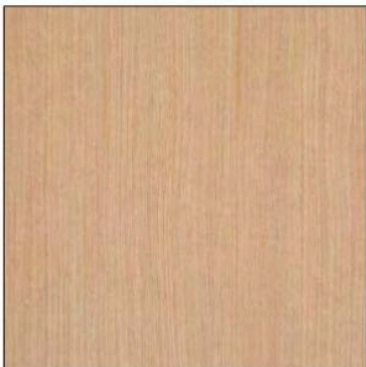


XP104

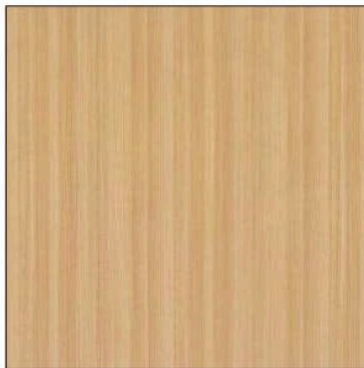


XP121

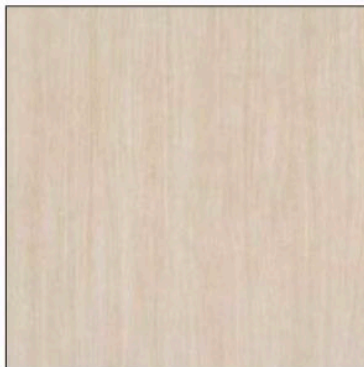


XP115

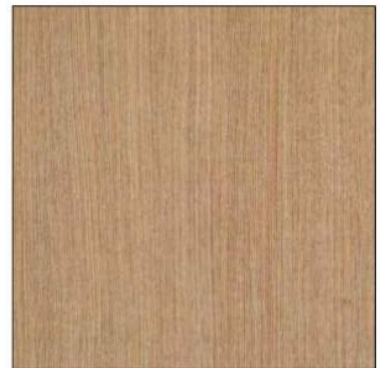

XP105

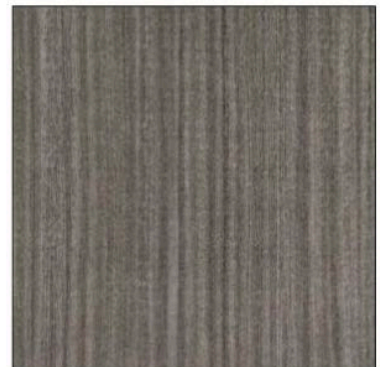


XP103

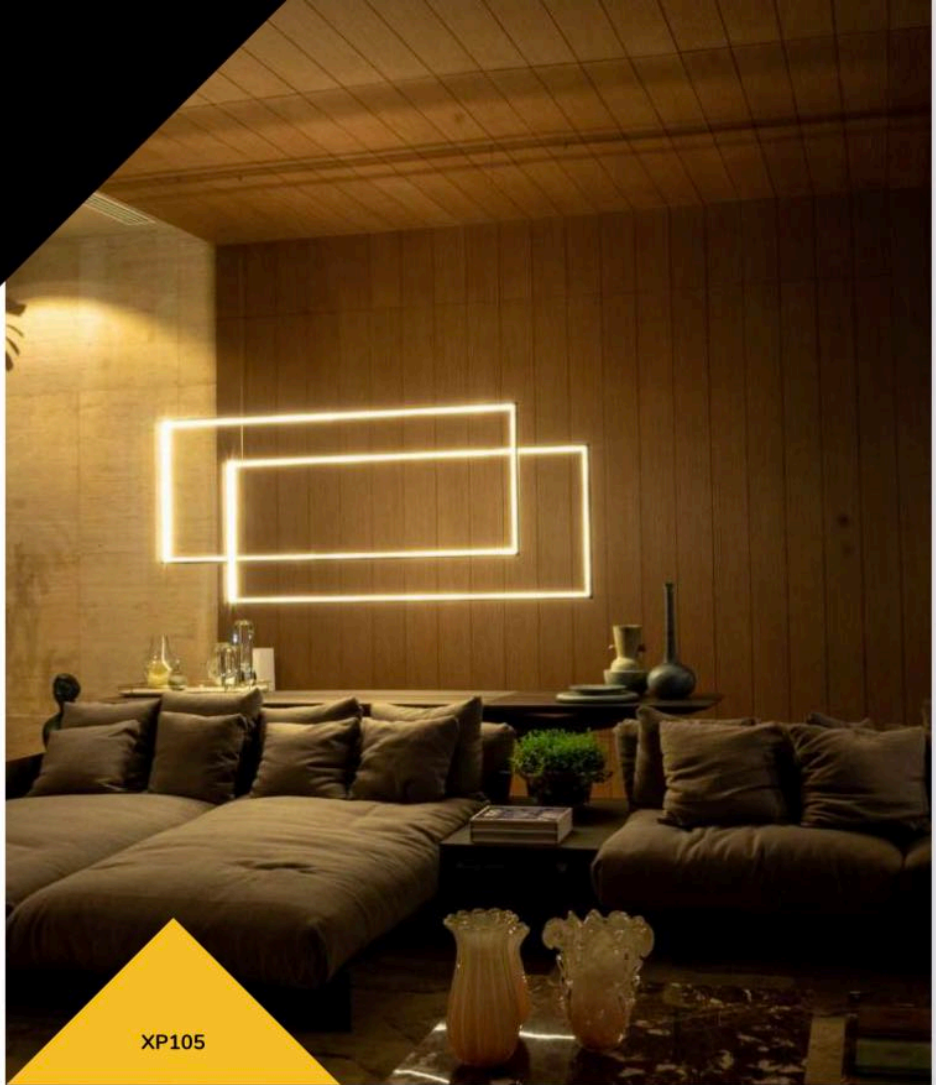


XP105


BODAQ painted wood

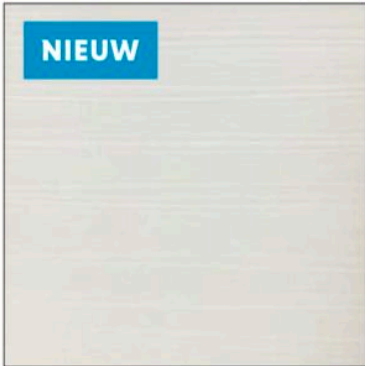

ZSW01

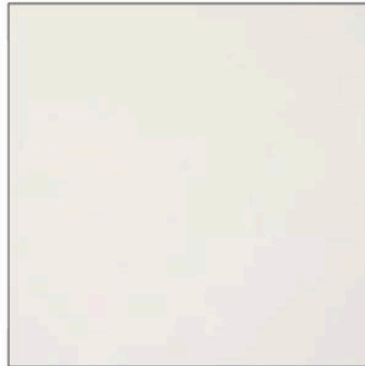


ZSW04

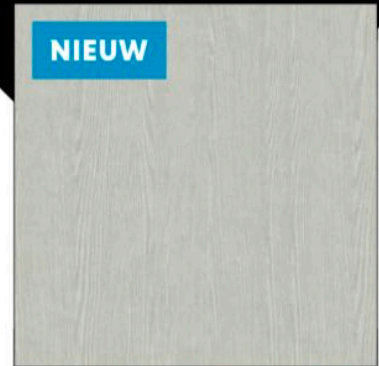

PTW08



PTW14

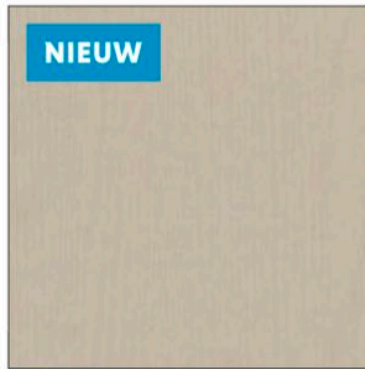


PTW03




PTW09




PTW04

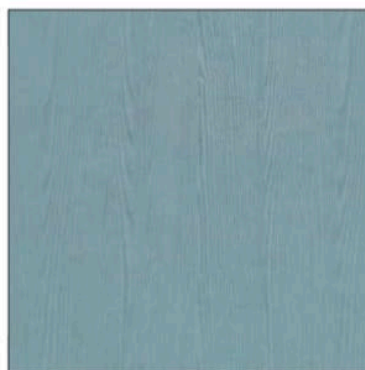


PTW06

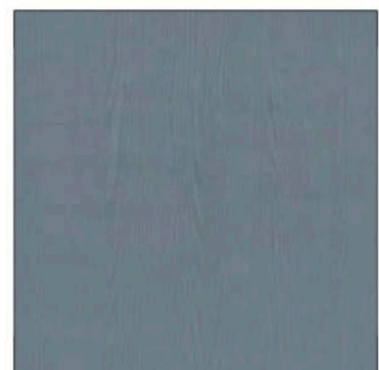


PTW05

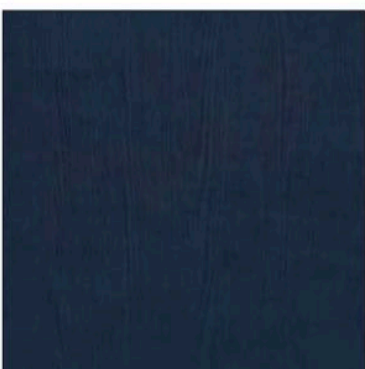

PTW07

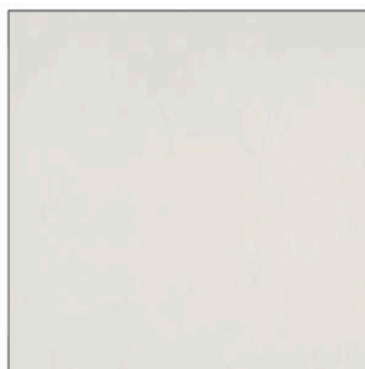

PNT01

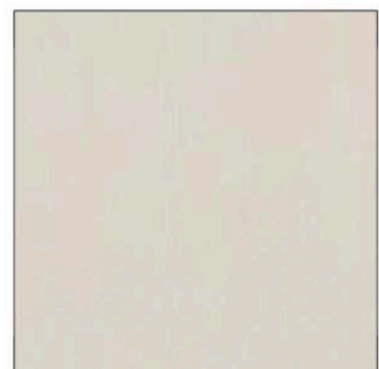


PNT02

BODAQ


Painted wood



PNT04

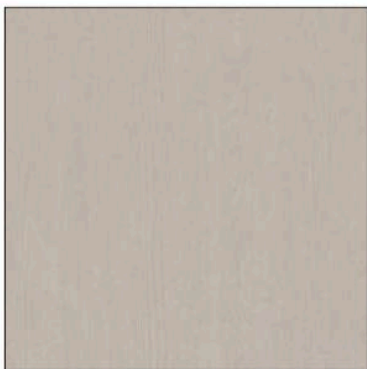


PNT04

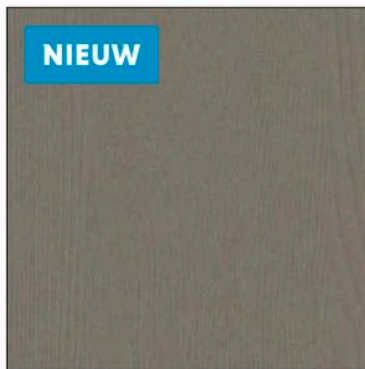


NIEUW

PNT08

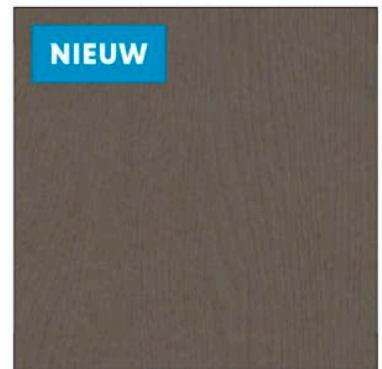


NIEUW

PNT05

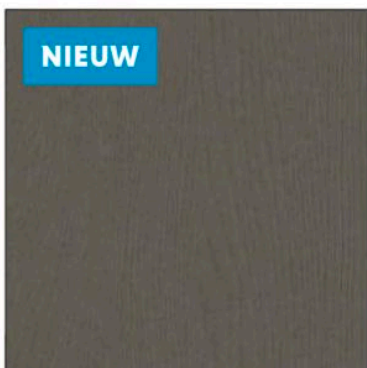


NIEUW

PNT10

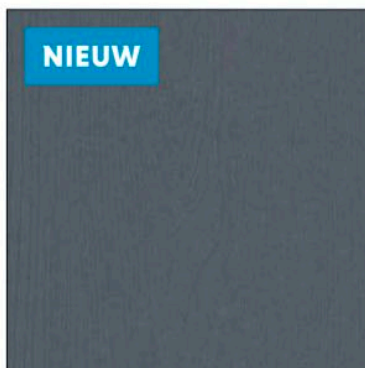

NIEUW

PNT09

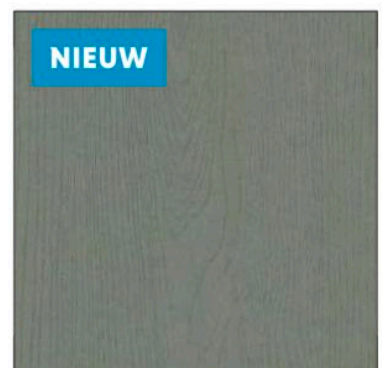


NIEUW

PNT07


BODAQ metal




APZ05

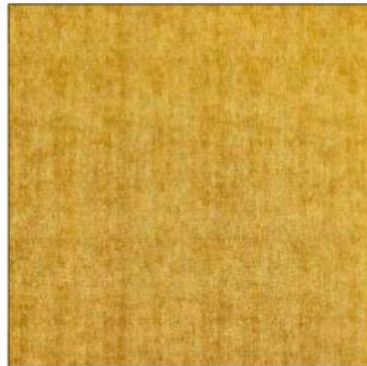


APZ25

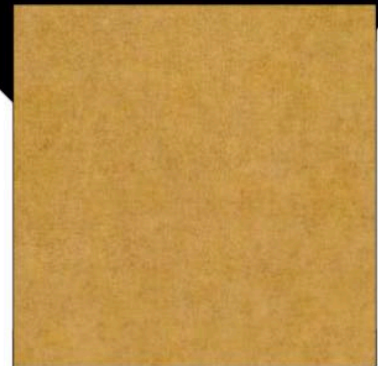

APZ26

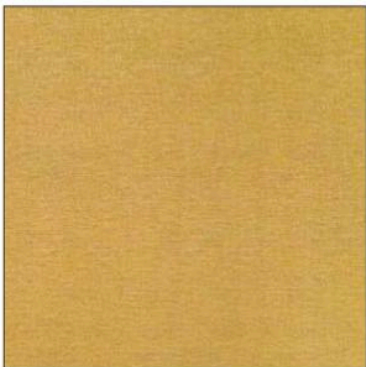


APZ18

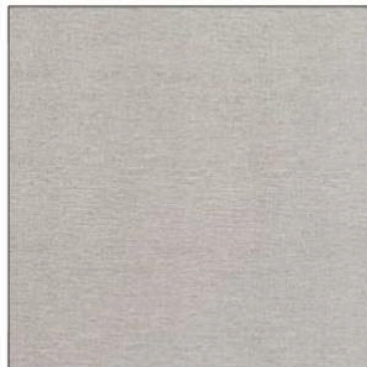


APZ14



NS601

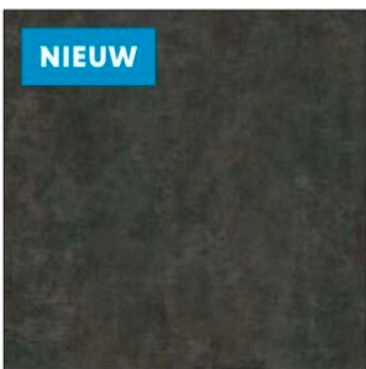


NS602

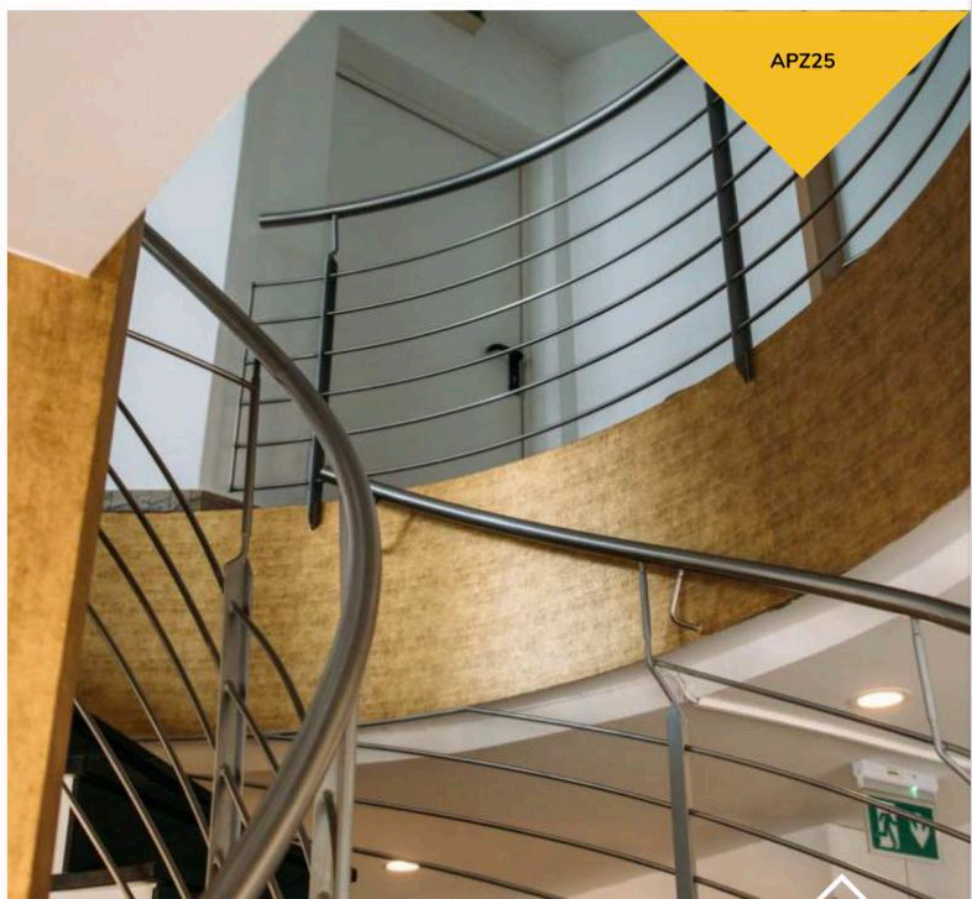


BODAQ


real metal

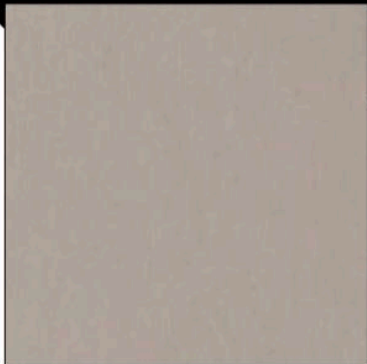

RM051

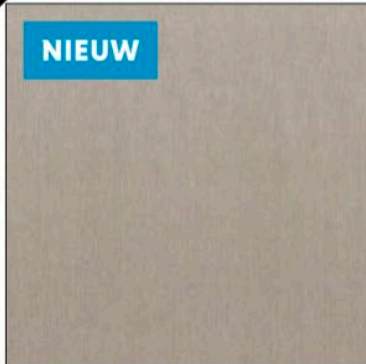

RM012

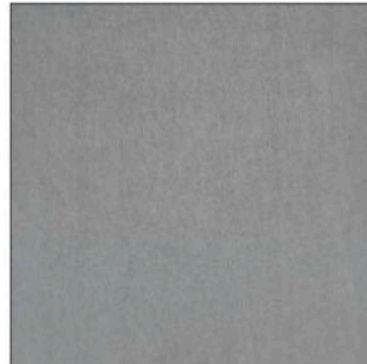

RM004



RM005




RM022




RM006




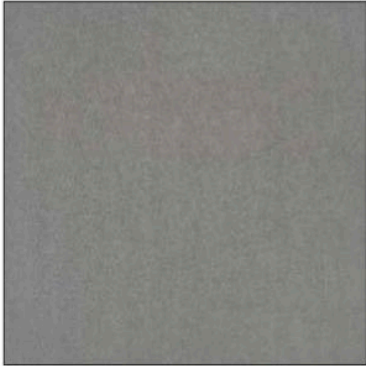


RM002

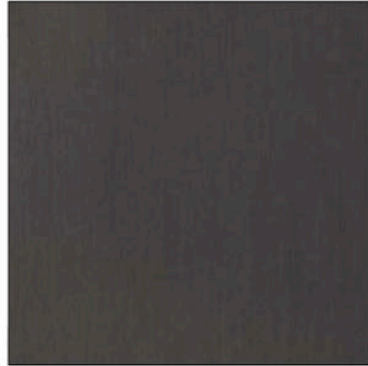


RM009

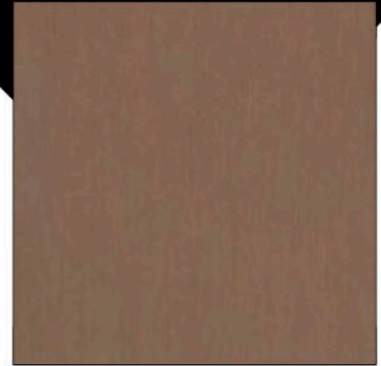

RM008

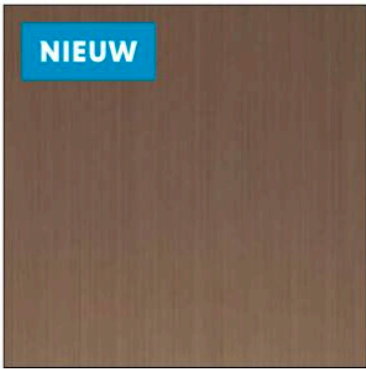


RM011

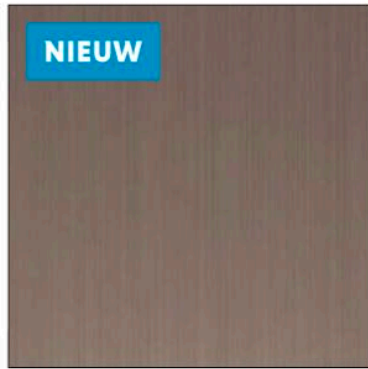

RM013




RM003

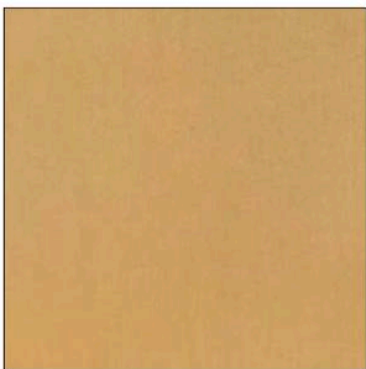

RM007

BODAQ

stone & marble

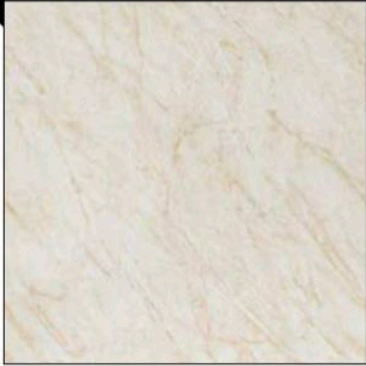

HD711



HD712



NS703



NS401



NS704



NS402



NS706



NS707



NS705



NS403



NS710



NS711


BODAQ
stone & marble

NS895




NIEUW

NS121

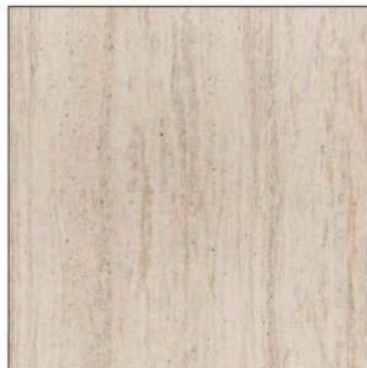


NS806

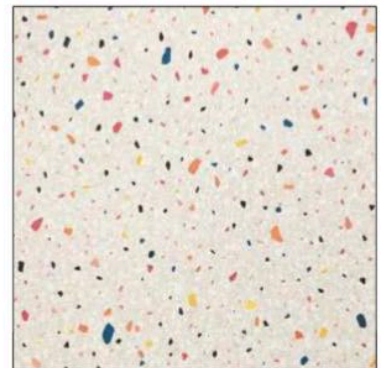


NS708



NS804

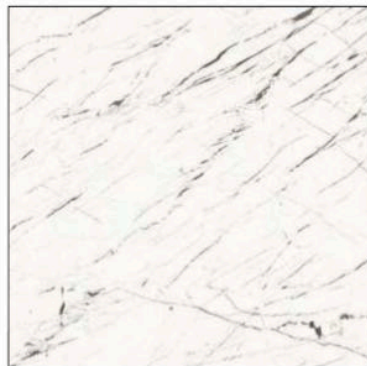

NS895

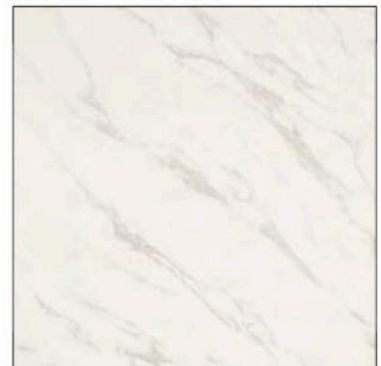

NS814

BODAQ


stone & marble




NS428




NS816

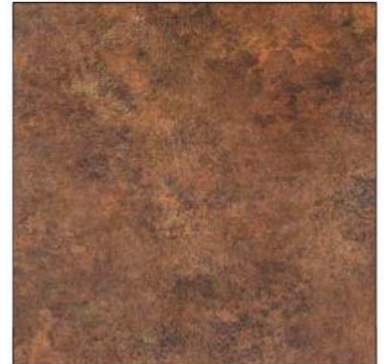

NS410

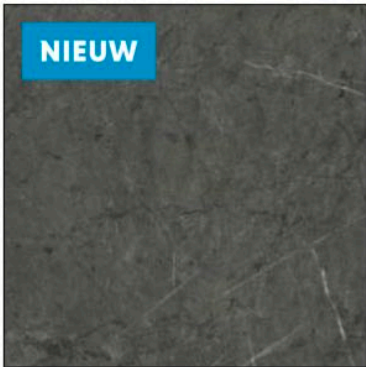


PM007

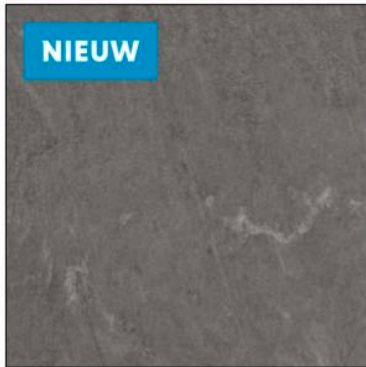

PM009



PM006

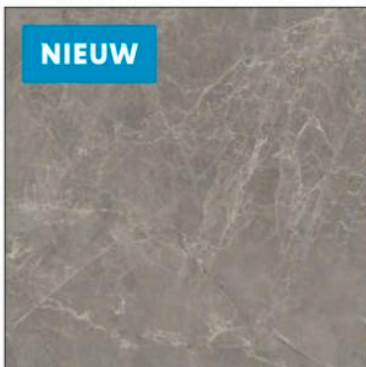

PM015



PM016



PM002



PM006


BODAQ stone & marble




PM004




PM008

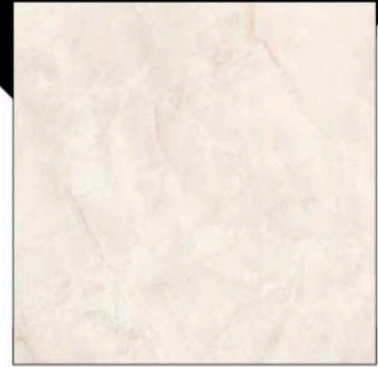


PM003

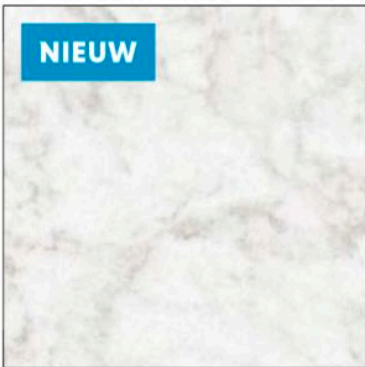

PM018

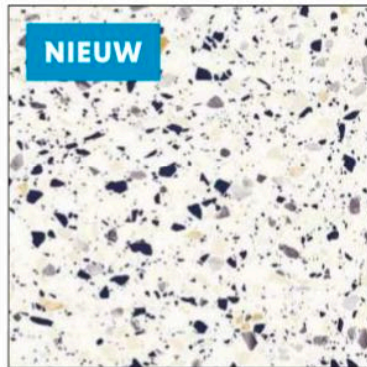


PM011

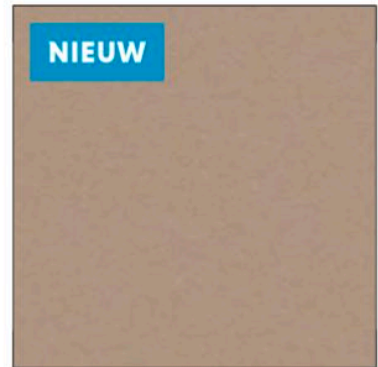


PNC41




PNC46

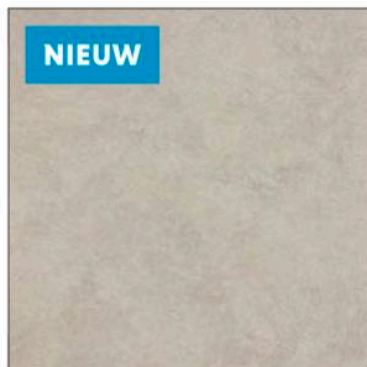


PNC50

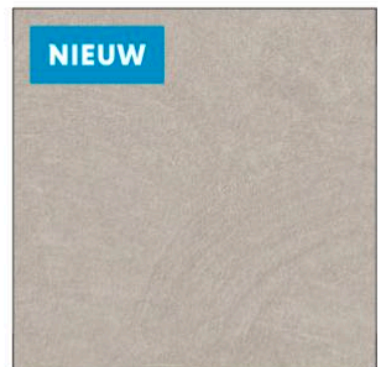


PNC45

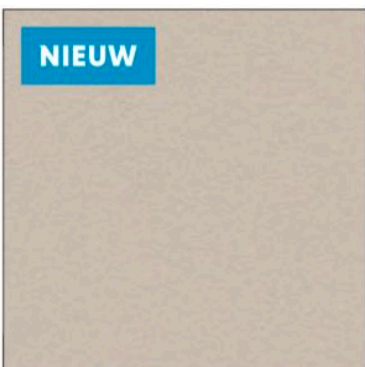

PNC43

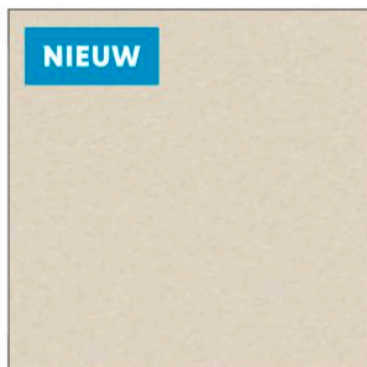

PNC42

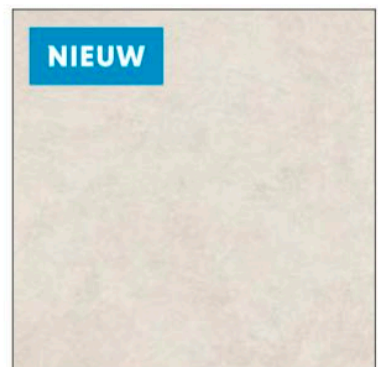

PNC49

BODAQ

leather & real fabric



TNS04



NIEUW


PNC44



TNS05




TNS04

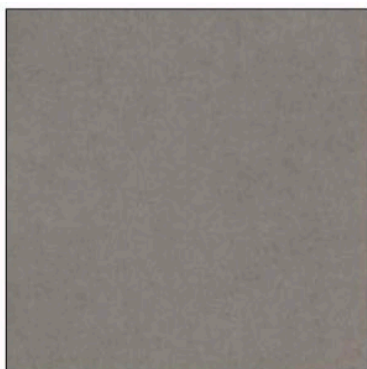

TNS03




TNS09

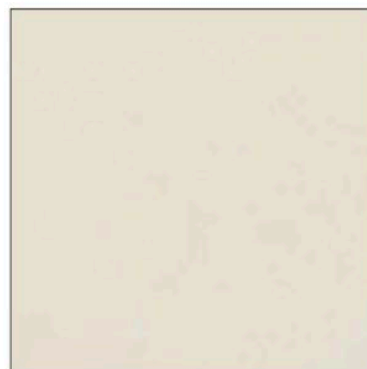


TNS10


BODAQ
leather & real fabric

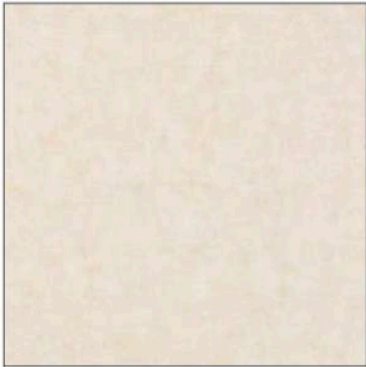


TNS14

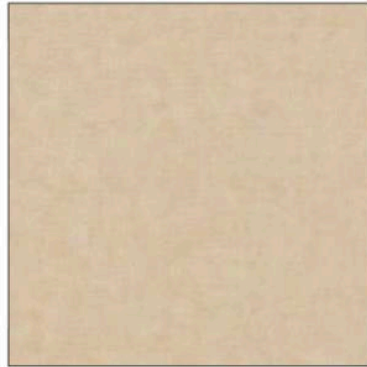

TNS13

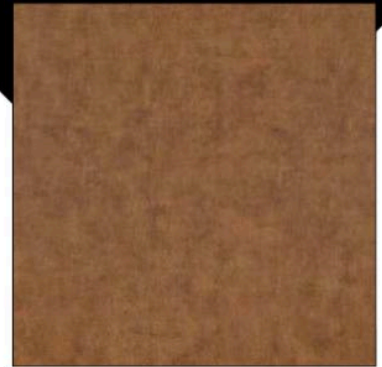

TNS12

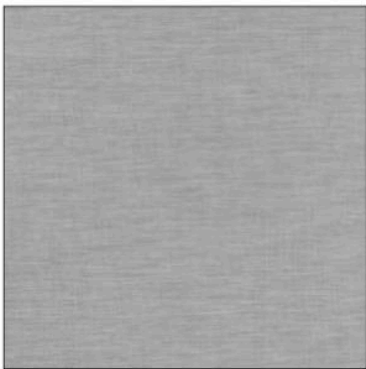

RF007



RF008



RF011



RF009



NS820